

③ Working mode

Real time mode: Scan and transmit, data will automatically lost if upload failed.

Cache mode: Same as real time mode if connection normal. Scan bar codes will be automatically restore if connection failed. Will upload one by one if connection return as normal.

Inventory Mode: Scanning bar codes will be restored without upload.

Configuration method: Scan the function bar code directly.



*Real-time mode



Inventory mode



Cache mode

④ Inventory Setting

This part is valid for inventory mode only

Upload data: Barcode data will transmit to terminal once scan this bar code.

Date sum: Scan "Data sum" bar code to check the scanner restore data sum.

Clear data: Scan "Clear data" and clear all the restore data in scanner.

Configuration method: Scan the function bar code directly.



Upload data



Data sum



Clear data

⑤ Sleep Time Setting

The sleep time means the time between the last operation move and auto turn off the scanner. User able to scan the corresponding bar code of the sleep time which is needed to accomplish the sleep time setting.



No Sleep



Sleep Now



60s



*5min



10min



30min

⑦ Bluetooth HID upload speed setting



Fast



*Medium



Low

Note: The function is valid only in Bluetooth HID mode.

⑧ Suffix



None



*0x0D(CR)



0x0A (LF)



TAB



0x0D&0x0A(CR&LF)

⑨ Keyboard Language



*US



German



Franch



Spanish



Brazilian

Decode Settings

Configuration method: Scan the function bar code directly.

① Defaults Parameter

1.The default setting allows the scanner to be restored to the factory setting state.

2.With "*" in bold means default parameter.



Restore Defaults

② Vibration mode setting



*On



Off

Note: It is effective only when there is a vibration function.

⑥ Communication mode



*Receiver mode



Bluetooth HID mode



Bluetooth BLE mode



Bluetooth SPP mode

Note: Only when the scanner has Bluetooth function related Bluetooth setting code is valid.

Decode Settings

Configuration method: Scan the function bar code directly.

① Defaults Parameter

- 1.The default setting allows the scanner to be restored to the factory setting state.
- 2.With "*" in bold means default parameter.



Restore Defaults

② Vibration mode setting



*On



Off

Note: It is effective only when there is a vibration function.

③ Working mode

Real time mode: Scan and transmit, data will automatically lost if upload failed.

Cache mode: Same as real time mode if connection normal. Scan bar codes will be automatically restore if connection failed. Will upload one by one if connection return as normal.

Inventory Mode: Scanning bar codes will be restored without upload.

Configuration method: Scan the function bar code directly.



*Real-time mode



Inventory mode



Cache mode

④ Inventory Setting

This part is valid for inventory mode only

Upload data: Barcode data will transmit to terminal once scan this bar code.

Date sum: Scan "Data sum" bar code to check the scanner restore data sum.

Clear data: Scan "Clear data" and clear all the restore data in scanner.

Configuration method: Scan the function bar code directly.



Upload data



Data sum



Clear data

⑥ Communication mode



*Receiver mode



Bluetooth HID mode



Bluetooth BLE mode



Bluetooth SPP mode

Note: Only when the scanner has Bluetooth function related Bluetooth setting code is valid.

⑦ Bluetooth HID upload speed setting



Fast



*Medium



Low

Note: The function is valid only in Bluetooth HID mode.

⑧ Suffix



None



*0x0D(CR)



0x0A (LF)



TAB



0x0D&0x0A(CR&LF)

⑤ Sleep Time Setting

The sleep time means the time between the last operation move and auto turn off the scanner. User able to scan the corresponding bar code of the sleep time which is needed to accomplish the sleep time setting.



No Sleep



Sleep Now



60s



*5min



10min



30min

⑨ Keyboard Language



*US



German



French



Spanish



Brazilian