 


Desktop Thermal Printer User Guide

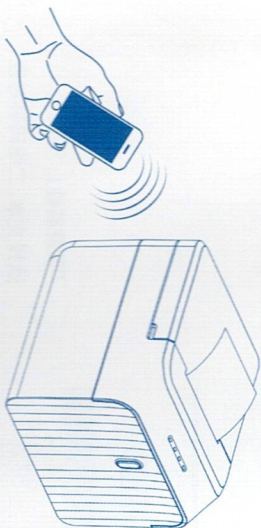

■ Please read the operating instructions carefully before use

6 Print Receipt

★How to use the Receipt version★

 
Switch receipt




Receipt template



Button indicator description
Power-on status: Turn on the power toggle switch, the POWER indicator light is always green.
Lack paper reminder: When there is no paper, the ERROR indicator will always be red.
Bluetooth status: When Bluetooth is not connected, the BT light flashes; when Bluetooth is connected, the BT light is always blue.

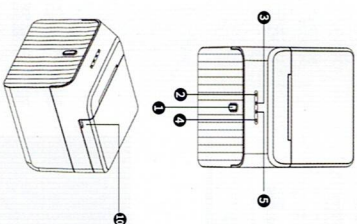


- | | | | |
|----------------|------------------------|-------------------------|-----------------|
| Button | Indicator light | Interface | Other |
| ① Feed key | ② Power indicator | ⑥ Power interface | ⑩ Open position |
| ⑨ Power button | ③ Lack paper indicator | ⑦ USB interface | ⑪ Power adapter |
| | ④ WIFI indicator | ⑧ Cash drawer interface | |
| | ⑤ Bluetooth indicator | | |

 

7 Edit Receipt

 Edit Receipt

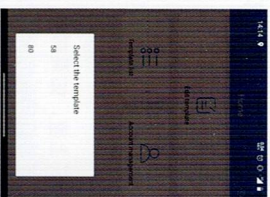

- Click template edit
- Choose a template, 58mm or 80mm



- Click ⊕ to insert components
- Double-click the component, you can modify the content
- Click the print icon at the bottom

8 Device Parameters

Device Parameters

Printing Method	Thermal	Character Size	24×24dots
Print Width	58MM	Barcode Type	CODE39;CODE128
Print Density	203dpi	Input Buffer	25K BYTES
Printing Speed	Up to 90 mm/sec	Power Input	AC100-240V
Interface	USB+Bluetooth	Power Output	12V/3A
Roll Paper Diameter	50MM	Operating System	Android/iOS/PC
Paper Thickness	0.06-0.08MM	Print Command	Support T PSL or ESC

Maintain Clean

 
 
Daily maintenance of the printer

- Cleaning the outside of the printer and the paper compartment: please gently wipe the surface of the printer and the inside of the paper compartment with a wrung wet cloth.
- The cleaning of the printer core: the printer core must be cleaned regularly, especially when the print quality declines.


Install paper roll

The desktop label/receipt printer uses 58MM thermal paper rolls and adopts easy device mechanism, paper loading is very convenient. the installation method of paper is as follows:

- Open the paper bin by breaking open the bin opening sheet (Figure 1)
- Load paper into the paper bin (Figure 2)
- Fasten the paper compartment cover to press the paper (Figure 3)

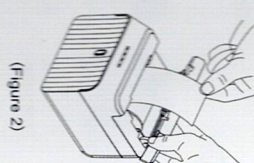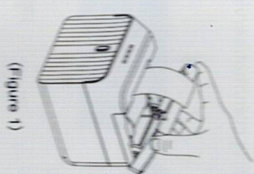

 If you need to install the roller, please place the right roller at 30mm and place the label paper to the right.



Software download



[Label/Receipt Software]

Scan to download printing software
Google Store search MLabel download
[Label/receipt computer printer driver]
https://www.mhtclouding.com/mht/service_en.html

Bluetooth connection

 


- ① Turn on the Bluetooth of the mobile phone, enter the main page of the software, click the printer icon in the upper right corner to enter the Bluetooth connection interface.
- ② Search for the printer model, select the printer to be paired, the pairing password is: 0000; when the Bluetooth signal light of the printer is always on, it means the Bluetooth connection is successful.

Software use

★How to use the label version★

[Method One] Label template

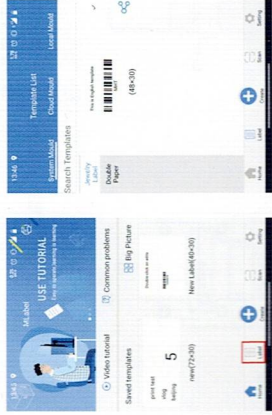

label printer
Enter [Label Template]
Choose the corresponding-
template
Go edit

[Method Two] New template



Enter the label name
(easy to find)
Enter the label width
(in mm)
Enter the label height
(in mm)

Edit label



「Edit label」

Click text, QR code, etc. to insert
Content, double click to enter content

Adjust attributes



「Adjust attributes」

Select text, QR code and other objects
Click again to change the corresponding
attribute value. For example: font size,
bold, underline One-dimensional code
rotation angle, type, Number of rows in
the table, etc.

Troubleshooting

Failure Phenomenon	Cause Of Issue	Solution
Printer intermittent	Unstable power supply	Please check whether the adapter has poor contact
The printer only feeds paper when printing, No data is printed	Reversed printing paper	Please install the paper in another direction
Printer printing is blurry	Printer does not clean for a long time Cause the movement to be contaminated	Need to clean the printer core
Printer second When the indicator light is red	Bad printing supplies	Please set the print speed and print density Please use our standard printing consumables
Print a small ticket in a few months even Blurred handwriting in a few weeks	Printer is out of paper	Close the paper compartment cover and install the printing paper correctly
Printer turns off automatically	Poor quality of consumables	Please use high-quality consumables
	Adapter does not supply power	Please check the adapter AC220V and DC12V Whether the power supply terminal is in good contact

Printer Cleaning

The print head should be cleaned when one of the following conditions occurs in the printer:

- ① Printing is not clear.
- ② A column in the vertical direction of the printed page is not clear.
- ③ Loud paper feeding noise.

The steps for cleaning the print head are as follows:

- ① Turn off the printer, open the top cover, if there is paper, remove the paper.
- ② If you have just finished printing, wait for the print head to cool down completely.
- ③ Use a soft cotton cloth dipped in absolute ethanol (should be wrung out) to wipe off the dust on the surface of the print head thermal sheet.
- ④ After waiting for the absolute ethanol to volatilize, close the cover and try the printer again.

⚠ Attention:

- ① Make sure that the power is turned off during routine maintenance of the printer.
- ② Do not touch the surface of the print head with your hands and metal objects, and do not use tools such as tweezers to scratch the surface of the print head, print rubber roller and sensor.
- ③ Do not use organic solvents such as gasoline and acetone.
- ④ Wait for the absolute ethanol to completely evaporate, then turn on the power to continue printing.

Product Warranty Card

Commodity Information	Trade name	Factory number	
	Trade model	Date of manufacture	
Customer Information	Unit name	Contacts	
	Address	Contacts number	
Sales Information	Name of seller	Contacts	
	Address	Contacts number	
	Date of sale	Invoice number	
Maintenance Records	Fault condition	Maintenance results	Customer signature
			Repairer's signature
			Date

Commodity Information	Trade name	Factory number	
	Trade model	Date of manufacture	
Customer Information	Unit name	Contacts	
	Address	Contacts number	
Sales Information	Name of seller	Contacts	
	Address	Contacts number	
	Date of sale	Invoice number	
Maintenance Records	Fault condition	Maintenance results	Customer signature
			Repairer's signature
			Date